


Fig. 01

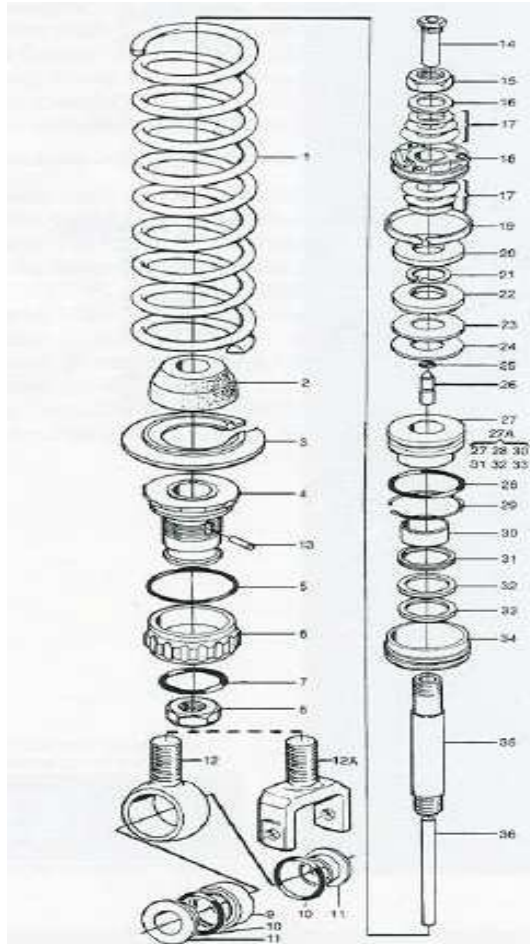

	S36PR1C1LB	HARLEY-DAVIDSON FX-DX	HD 215
Fig no.	Part no.	Description	
End eye			Qty
01-01	00180-97	Spring	1
01-02	03063-01	Bump rubber	1
01-03	00116-04	Spring clip	1
01-04	03058-01	Shaft extension	1
01-05	00338-83	O-ring	1
01-06	03057-01	Adjustment wheel	1
01-07	00338-25	O-ring	1
01-08	03059-01	Nut	1
01-09	00124-10	Rubber bushing	1
	00123-13	Sleeve for rubber bushing	1
01-12	03061-11	End eye	1
01-13	01030-07	Pin	1
01-14	00672-04	Valve assy	1
01-15	00539-01	Nut	1
01-16	00519-07	Washer	1
01-17		Shims. See spec.card	
01-18	03077-02	Piston	1
01-19	03078-01	Piston ring	1
01-20	03068-01	Washer	1
01-21	00436-01	Circlip	1
01-22	03269-02	Spacer	2
01-23	03269-03	Spacer	4
01-24	03067-01	Stop rubber	1
01-25	00338-14	O-ring	1
01-26	01055-03	Adjustment needle	1
01-27A	03164-01	Seal head assy	1
01-28	00338-09	O-ring	1
01-29	00128-01	Circlip	1
01-30	01056-12	Bushing	1
01-31	00827-01	X-ring	1
01-32	01032-03	Back up ring	1
01-33	03070-01	Scraper	1
01-34	03065-01	End cap	1
01-35	03062-01	Shaft	1
01-36	00566-64	Adjustment shaft	1

Fig. 02

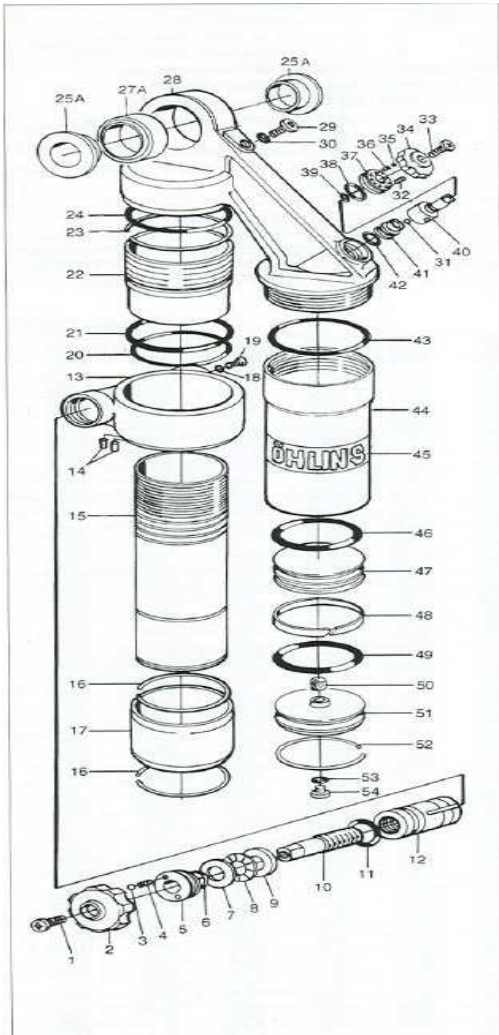


Fig no.	S36PR1C1LB	HARLEY-DAVIDSON FX-DX	HD 215
Fig no.	Part no.	Description	Qty
Body tube			
02-01	00382-08	Screw	1
02-02	03076-01	Adjustment wheel	1
02-03	00884-03	Ball	1
02-04	03083-01	Spring	1
02-05	03071-01	Cover	1
02-06	00338-60	O-ring	1
02-07	03072-01	Washer	1
02-08	01023-01	Bearing	1
02-09	03073-01	Washer	1
02-10	03074-01	Shaft	1
02-11	00338-71	O-ring	1
02-12	03075-01	Piston	1
02-13	00350-01	Housing left	1
02-13	00350-02	Housing right	1
02-14	01030-06	Pin	2
02-15	00300-08	Cylinder tube	1
02-17	00417-02	Sleeve	1
02-18	00338-59	O-ring	1
02-19	00382-05	Screw	1
02-20	00338-61	O-ring	1
02-21	00338-61	O-ring	1
02-22	03069-01	Sleeve	1
02-23	00131-01	Circlip	1
02-24	00338-02	O-ring	1
02-27	00124-10	Rubber bushing	1
	00123-13	Sleeve for rubber bushing	1
02-28	00303-32	Cylinder head	1
02-29	00382-07	Screw	1
02-30	00438-33	O-ring	1
02-31	00884-03	Ball	1
02-32	01030-05	Pin	1
02-33	00828-01	Screw	1
02-34	03079-01	Adjustment wheel	1
02-35	00884-03	Ball	1
02-36	03083-01	Spring	1
02-37	03080-01	Collar	1
02-38	00338-81	O-ring	1
02-39	00338-82	O-ring	1
02-40	03081-01	Shaft	1
02-41	03082-01	Valve seat	1
02-42	00338-80	O-ring	1
02-43	00338-24	O-ring	1
02-44	00302-02	Reservoir	1
02-45	00191-01	Sticker Öhlins	1
02-00	00196-01	Sticker Warning	1
02-46	00338-26	O-ring	1
02-47	00305-01	Reservoir piston	1
02-48	00340-01	Teflon band	1
02-49	00338-04	O-ring	1
02-51	00161-03	End cap assy	1
02-52	00329-01	Circlip	1
02-53	00338-59	O-ring	1
02-54	01050-01	Screw	1