



Fig. 01

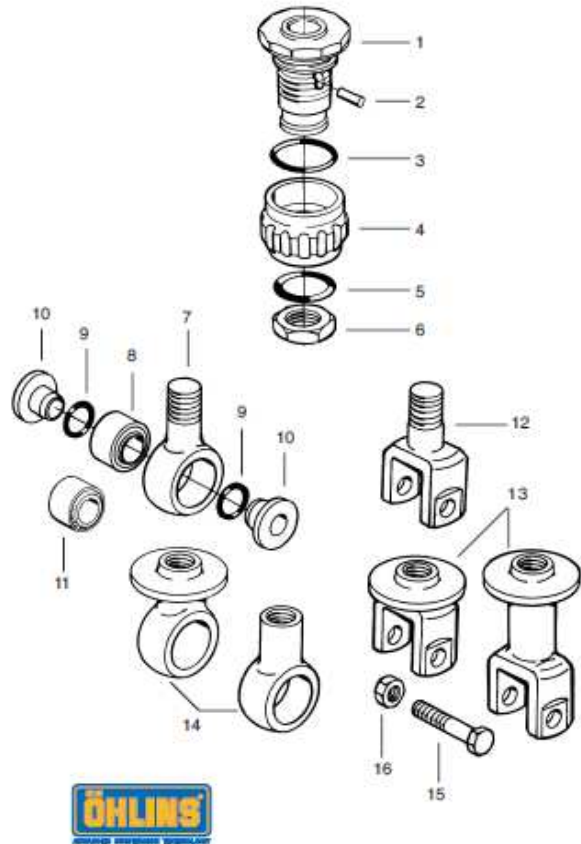


	S36HR1C1L	HONDA APE 50/100	HO 511
Fig No.	Part No	Description	
End eye			
01-01	03058-02	Shaft extension	1
01-02	01030-07	Pin	1
01-03	00338-83	O-ring Reb.adjuster lower	1
01-04	03057-01	Adjustment knob	1
01-05	00338-25	O-ring Reb.adjuster upper	1
01-06	03059-01	Nut	1
01-12	03084-02	End bracket	1
01-15	00432-05	Screw M 8x45	1
01-16	00430-05	Nut	1

Fig.02

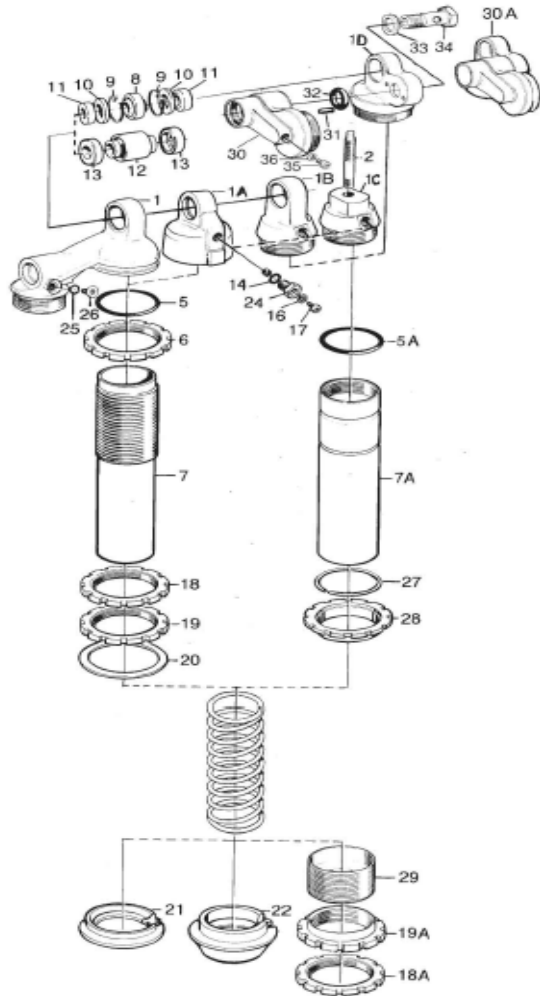


	S36HR1C1L	HONDA APE 50/100	HO 511
Fig No.	Part No	Description	
Body tube			
02-01A	00201-43	Cylinder head	1
02-05	00338-02	O-ring	1
02-07	04300-34	Cylinder tube	1
02-08	00536-04	Ball joint	1
02-10	00534-01	Seal	2
02-11	01218-12	Spacer	2
02-19	03251-02	Spring seat	1
	05410-02	Stop screw spring seat	1
02-21	00162-02	Spring clip	1
	00281-39	Spring	1

Fig.03

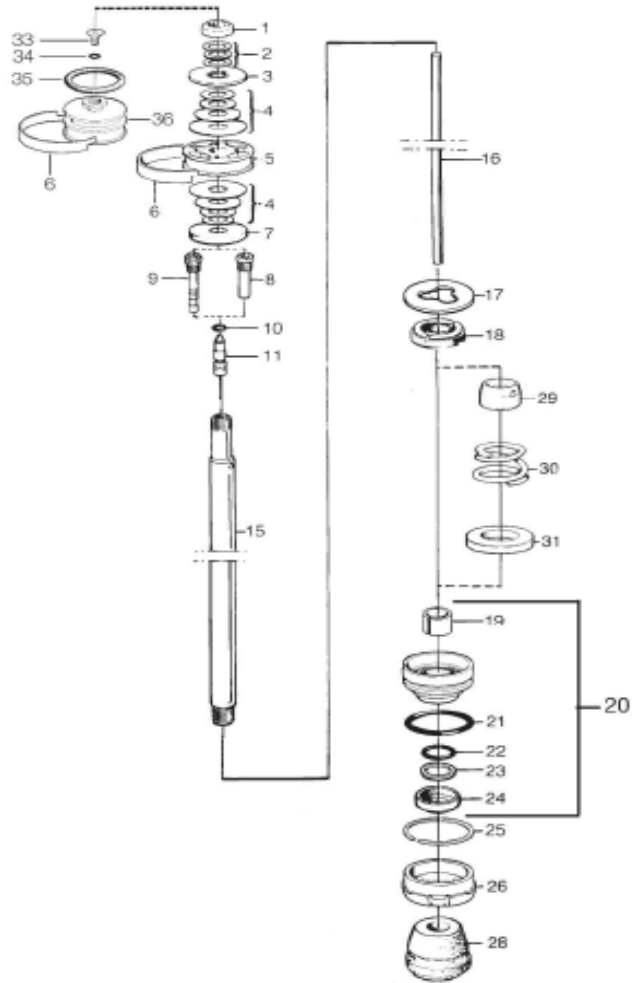


	S36HR1C1L	HONDA APE 50/100	HO 511
Fig No.	Part No	Description	
Shaft			
03-01	00539-01	Lock nut	1
03-02	00578-01	Washer	1
03-03	00519-05	Stop washer	1
03-05	03077-01	Piston	1
03-06	03078-01	Piston ring	1
03-07	03068-01	Stop washer	1
03-08	00675-05	Valve assy	1
03-10	00338-14	O-ring	1
03-11	01055-04	Adjustment needle	1
03-15	03062-14	Shaft	1
03-16	03566-37	Adj.shaft	1
03-17	03269-02	Spacer	1
03-17	03269-03	Spacer	2
03-18	03067-02	Stop rubber	1
03-19	01056-12	Bushing	1
03-20	03164-03	Seal head assy	1
03-21	00338-09	O-ring	1
03-22	00827-01	X-ring	1
03-23	01032-03	Back-up ring	1
03-24	03070-01	Scraper	1
03-25	00128-01	Circlip	1
03-26	03065-02	End cap	1
03-28	00163-18	Bump rubber	1

Fig.04

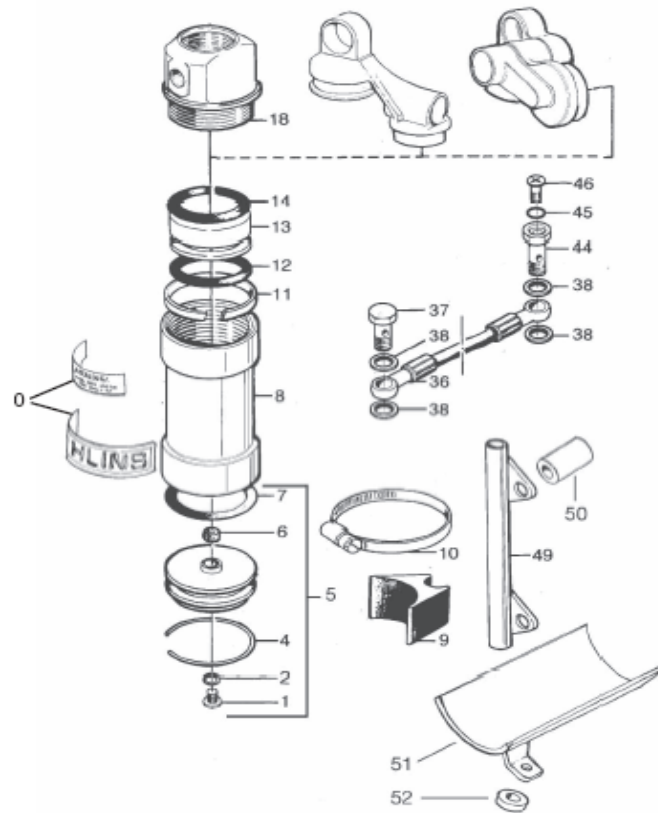

	S36HR1C1L	HONDA APE 50/100	HO 511
Fig No.	Part No	Description	Qty
Reservoir			
04-00	00191-02	Sticker "ÖHLINS" blue/transp	1
04-00	00196-01	Sticker "Warning"black/transp 17x53	1
04-01	01050-01	Screw	1
04-02	00338-59	O-ring	1
04-04	00329-01	Circlip	1
04-05	00161-03	Reservoir top assy	1
04-07	00338-04	O-ring	1
04-08	00302-06	Reservoir	1
04-09	00230-01	Rubber mount	2
04-10	00643-02	Hose clamp stainless	2
04-11	00340-01	Teflon band	1
04-12	00338-26	O-ring	1
04-13	00305-01	Reservoir piston	1
04-14	00338-24	O-ring	1
04-18	00862-02	Reservoir end	1
04-36	00637-21	Hose	1
04-37	00631-01	Banjo bolt	1
04-38	00586-01	Seal washer	4
04-44	00631-02	Banjo bolt	1
04-45	00438-33	O-ring	1
04-46	00382-07	Screw	1

Fig.05

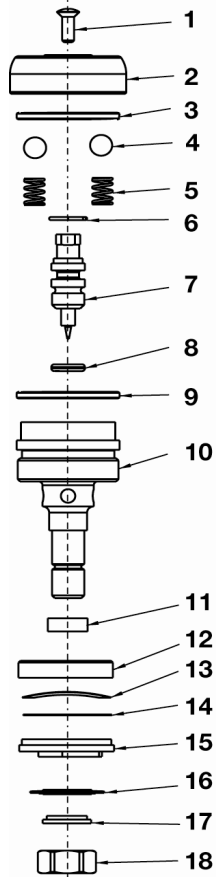

	S36HR1C1L	HONDA APE 50/100	HO 511
Fig No.	Part No	Description	Qty
Compr. Valve			
05-01	00828-01	Screw	1
05-02	00820-02	Knob	1
05-04	00884-07	Ball	2
05-05	00833-01	Spring	2
05-06	01473-06	Circlip	1
05-07	01242-06	Adjustment needle	1
05-08	00338-79	O-ring	1
05-09	00338-27	O-ring	1
05-10	01243-08	End piece	1
05-12	01247-01	Check valve housing	1
05-13	01246-01	Wave washer	1
05-14	01245-01	Check valve shim	1
05-15	01244-05	Valve	1
05-16		Shims see spec.card	1
05-17	00641-01	Washer	1
05-18	00430-07	Nut	1